






 



 










 









 


 








 

 





 


 

 
 
 

 



 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	[≡i]/Info		Info
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[≡?]/Source		AV
	(OI/II/Audio		Dual
	Menu		Menu
	Exit		Exit

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	CH+		Ch +
	CH-		Ch -
	Index		Smart
	List		List
	Vol+		Vol +
	Vol-		Vol -
	♥		Pre Ch
	Sleep		Sleep
	EPG		Guide
	Back		Back
	Red		Red
	Green		Green





Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	[≡]/Text		Text
	Play/Pause		Play
	[≡+]/Still		Format
	Stop		Stop
	Radio		TV/R
	[≡◆*/[+]		3D
	[≡x]		Options
	[≡o]/Subtitle		Subt
	DMP		Media
	Rec		Rec

Originalfernbedienung Ersatzfernbedienung

