


 


 
 





 








 



 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV
	Sleep		Sleep
	Freeze		Shift + Pause
	Pic Mode		Format
	Pic Size		3D
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	100		Guide

Originalfernbedienung Ersatzfernbedienung

	FAV		Shift + Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Recall		Pre Ch
	Mute		Mute
	C.Caption		Smart
	CH+		Ch +
	CH-		Ch -
	CH RTN		Back
	Info		Info
	Up		Up
	Left / Back CB		Left
	Enter		Ok
	Right / Next CB		Right
	Down		Down
	Menu		Menu
	Exit		Exit



