 

 
















 

 

 
 
 
 

 

 
 
 

 


 








Originalfernbedienung Ersatzfernbedienung

	RCVR On		Power
	RCVR Standby		Shift + Power
	RCVR Return		Back
	RCVR Setup		Options
	RCVR		Ch +
	RCVR CH-/Disc-		Ch -
	RCVR Vol+		Vol +
	RCVR Vol-		Vol -
	RCVR CH Sel / Top Menu		Shift + Menu
	RCVR CH Sel / Top Menu		D. Menu
	RCVR Test / Menu		Menu
	RCVR Audio Sel / TV/VCR		TV/R
	RCVR Muting		Mute
	RCVR Up		Up
	RCVR Left		Left
	RCVR Enter		Ok
	RCVR Right		Right

Originalfernbedienung Ersatzfernbedienung

	RCVR Down		Down
	RCVR Angle / Level Down		Format
	RCVR Subtitle / Level Up		Subt
	RCVR I<<		I<<
	RCVR Play		Play
	RCVR >>I		>>I
	RCVR <<		<<
	RCVR Stop		Stop
	RCVR >>		>>
	RCVR Rec /		Rec
	RCVR Play Rev.		Pause
	RCVR Input Sel.		1
	RCVR Input Sel.		2
	RCVR Input Sel.		3
	RCVR Input Sel.		4
	RCVR Input Sel.		5
	RCVR Input Sel.		6



TUN



Originalfernbedienung Ersatzfernbedienung

	RCVR Input Sel.		7
	RCVR Input Sel.		8
	RCVR Input Sel.		9
	RCVR Input Sel.		0
	RCVR Pure A	+	Shift + 1
	RCVR Direct	+	Shift + 2
	RCVR Stereo	+	Shift + 3
	RCVR Surr.	+	Shift + 4
	RCVR All St.	+	Shift + 5
	RCVR DSP	+	Shift + 6
	SP A	+	Shift + 7
	SP B	+	Shift + 8
	CINE FLTR	+	Shift + 9
	RCVR Dimmer	+	Shift + 0
	RCVR Display		Info
	RCVR Display		Guide
	RCVR Zone 2		Pre Ch

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	DVD On		Power
	DVD Standby	 + 	Shift + Power
	DVD Sleep		Sleep
	DVD Return		Back
	DVD Setup		Options
	DVD Disc+		Ch +
	DVD Disc-		Ch -
	DVD Vol+		Vol +
	DVD Vol-		Vol -
	DVD CH Sel / Top Menu	 + 	Shift + Menu
	DVD CH Sel / Top Menu		D. Menu
	DVD Test /		Menu
	DVD Audio Sel / TV/VCR		TV/R
	Muting		Mute
	DVD Angle /		Format
	DVD Subtitle / Level+		Subt
	DVD I<<		I<<

 







 

 
 
 

Originalfernbedienung Ersatzfernbedienung

	DVD Play		Play
	DVD >>I		>>I
	DVD <<		<<
	DVD Stop		Stop
	DVD >>		>>
	DVD Random		Rec
	DVD Pause		Pause
	DVD Eject		Exit
	DVD Input Sel.		1
	DVD Input Sel. CD		2
	DVD Input Sel. V1		3
	DVD Input Sel. V2		4
	DVD Input Sel.		5
	DVD Input Sel.		6
	DVD Input Sel. V3		7
	DVD Input Sel. V4		8
	DVD Input Sel. V5		9





Originalfernbedienung Ersatzfernbedienung

	DVD Input Sel. PH		0
	DVD 1		Shift + 1
	DVD 2		Shift + 2
	DVD 3		Shift + 3
	DVD 4		Shift + 4
	DVD 5		Shift + 5
	DVD 6		Shift + 6
	DVD 7		Shift + 7
	DVD 8		Shift + 8
	DVD 9		Shift + 9
	DVD 0		Shift + 0
	DVD +10 / --/--		Guide
	DVD Search/Enter		Pre Ch

Originalfernbedienung Ersatzfernbedienung

 







 





 
 
 

 





Originalfernbedienung Ersatzfernbedienung

	On		Power
	Standby		Shift + Power
	Disc+		Ch +
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Subtitle		Subt
	I<<		I<<
	Play		Play
	>>I		>>I
	<<		<<
	Stop		Stop
	>>		>>
	Pause		Pause
	Random		Rec
	Eject		Eject
	1		1

Originalfernbedienung Ersatzfernbedienung

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide

