



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Lang		Audio / Lang I/II
	0		0
	TXT		Text / Goto
	Vol+		Vol+
	Mute		Mute / Dimmer
	P-		CH- / Page-
	Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

	Source		AV / Input / RDS
	P+		CH+ / Page+
	Home		Menu / Home
	G		Guide / EPG / -/--
	i		Info / Angle
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	Netflix		Shift + Red / Netflix /
	YouTube		Shift + Yellow / YouTube /
	*1		Picture / Format
	Prime Video		Shift + Blue / Prime
	Red		Red / Netflix / Search



[illegible][illegible]