






















 
 











**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Source		AV
	Tv/Radio		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide
	OPT+		Options
	Back		Back
	Last		Pre Ch

**Originalfernbedienung Ersatzfernbedienung**

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	P+		Ch +
	P-		Ch -
	V+		Vol +
	V-		Vol -
	Mute		Mute
	i		Info
	Menu		Menu
	List		List





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Text	 Text		
 Wide	 3D		
 V-Format	 Format		
 Page Up	 >>		
 Page Down	 <<		

