



Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|----------|--|------------------|
| | On | | Power |
| | Off | | Shift + Power |
| | Mute | | Mute / Dimmer |
| | AVR | | AV / Input / RDS |
| | DVD | | Shift + 2 |
| | CD | | Shift + 3 |
| | Tape | | Shift + 5 |
| | VID1/VCR | | Shift + 4 |
| | VID2/TV | | Shift + 1 |
| | CBL/SAT | | Shift + 0 |
| | AM/FM | | Shift + 6 |
| | Sleep | | Sleep / Timer |
| | Test | | TV/Radio / |
| | Vol+ | | Vol+ |
| | Surr. | | Eject / Surround |
| | Night | | Zoom / Size |
| | [≡] | | Text / Goto |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--------------|--|------------------|
| | Vol- | | Vol- |
| | CH./[≡?] | | Picture / Format |
| | SPKR/Menu | | Menu / Home |
| | Up | | Up |
| | Left | | Left |
| | Set | | OK |
| | Right | | Right |
| | Digital/[≡X] | | Setup / OPT / |
| | Down | | Down |
| | Delay/Normal | | Sound / Title |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--------------|--|-----------------------------|
| | 8 | | 8 |
| | Tun-M/[≡+] | | Smart / List |
| | 9 | | 9 |
| | 0 | | 0 |
| | Mem/[≡◆] | | D.Menu / Top |
| | Tuning ▲ | | >> / Tune+ |
| | Red | | Red / Netflix / Search |
| | Direct/Green | | Green / APP / Repeat |
| | Clear/Yellow | | Yellow / YouTube / Repeat |
| | Preset ▲ | | >> / Preset+ |
| | Blue | | Blue / Prime Video / Random |
| | Tuning ▼ | | << / Tune- |
| | RDS/D.Skip | | Display / Media |
| | Preset ▼ | | << / Preset- |
| | << DVD | | Shift + << / |
| | > DVD | | Shift + Play / |
| | >> DVD | | Shift + >> / |

Tune+








 



Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|---------------|--|------------------------|
| | Stop DVD | | Shift + Stop / |
| | Pause DVD | | Shift + Pause / Step / |
| | I<</Skip Down | | Shift + I<< / Preset- |
| | Skip Up/>> | | Shift + >> / Preset+ |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|------------------|
|  | Power On |  | Power |
|  | Power Off |  | Shift + Power |
|  | Vol+ |  | Vol+ |
|  | Night |  | Zoom / Size |
|  | [=] |  | Text / Goto |
|  | Vol- |  | Vol- |
|  | CH./[=?] |  | Picture / Format |
|  | SPKR/Menu |  | Menu / Home |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Set |  | OK |
|  | Right |  | Right |
|  | Digital/[=X] |  | Setup / OPT / |
|  | Down |  | Down |
|  | Delay/Normal |  | Sound / Title |
|  | 1 |  | 1 |
|  | 2 |  | 2 |





 

 

 









 


 
 

 

 

 

 



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|-----------------------|
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | Tun-M/[=+] |  | Smart / List |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Mem/[=◇] |  | D.Menu / Top |
|  | Direct |  | Green / APP / Repeat |
|  | Clear |  | Exit / Cancel / Clear |
|  | Preset ▲ |  | CH+ / Page+ |
|  | Preset ▲ |  | Shift + >>1 / Preset+ |
|  | RDS/D.Skip |  | Display / Media |
|  | Preset ▼ |  | CH- / Page- |
|  | Preset ▼ |  | Shift + I<< / Preset- |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|------------------|
|  | Power On |  | Power |
|  | Power (On /Off) |  | Mute / Dimmer |
|  | Power Off |  | Shift + Power |
|  | PR+ VCR |  | CH+ / Page+ |
|  | Input VCR |  | AV / Input / RDS |
|  | Vol+ VCR |  | Vol+ |
|  | PR- VCR |  | CH- / Page- |
|  | Vol- VCR |  | Vol- |
|  | SPKR/Menu |  | Menu / Home |
|  | Delay/Normal |  | Sound / Title |
|  | 1 |  | 1 |
|  | 1 VCR |  | Shift + 1 |
|  | 2 |  | 2 |
|  | 2 VCR |  | Shift + 2 |
|  | 3 |  | 3 |
|  | 3 VCR |  | Shift + 3 |
|  | 4 |  | 4 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|-------------------------------|
|  | 4 VCR |  | Shift + 4 |
|  | 5 |  | 5 |
|  | 5 VCR |  | Shift + 5 |
|  | 6 |  | 6 |
|  | 6 VCR |  | Shift + 6 |
|  | 7 |  | 7 |
|  | 7 VCR |  | Shift + 7 |
|  | 8 |  | 8 |
|  | 8 VCR |  | Shift + 8 |
|  | Tun-M/[≡+] |  | Smart / List |
|  | 9 |  | 9 |
|  | 9 VCR |  | Shift + 9 |
|  | 0 |  | 0 |
|  | 0 VCR |  | Shift + 0 |
|  | Mem/[≡♦] |  | D.Menu / Top |
|  | Direct |  | Green / APP / Repeat |
|  | Clear VCR |  | Shift + Exit / Cancel / Clear |



