

 



 







 

 







 

 

 

 

 







 








 




 















Originalfernbedienung Ersatzfernbedienung

	Eject		Eject / Surround
	Power		Power
	Red/Program		Red / Netflix / Search
	Red/Program		TV/Radio /
	Green/Marker		Green / APP / Repeat
	Yellow/Digest		Yellow / YouTube / Repeat
	Blue/Zoom		Blue / Prime Video / Random
	Blue/Zoom		Zoom / Size
	1		1
	2		2
	3		3
	Subtitle		Subtitle / EQ
	4		4
	5		5
	6		6
	Angle		Info / Angle
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	Audio		Audio / Lang I/II
	Clear		Exit / Cancel / Clear
	0		0
	Search		Shift + Red / Netflix /
	Shuffle		Shift + Blue / Prime
	PIP		Sleep / Timer
	Setup		Setup / OPT /
	Repeat		Shift + Green / APP /
	2nd Audio		Sound / Title
	Home		Smart / List
	Home		Shift + Menu /
	A/B		Shift + Yellow / YouTube /
	Top Menu		D.Menu / Top
	Pop-Up/Menu		Menu / Home
	Up		Up



