





Originalfernbedienung Ersatzfernbedienung

	DVD Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Open / Close		Exit
	Setup		Options
	Zoom		Eject
	3D Sound		3D
	Bookmark		Pre Ch
	Volume Con.		Guide

Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause
	I<<		I<<
	>>I		>>I
	Return		Back
	Step		Shift + Pause
	Clear		Shift + Exit
	Top Menu		Shift + Menu
	Top Menu		D. Menu
	Display		Info
	Menu		Menu
	Up		Up
	Left		Left
	Enter		Ok



