



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Eject		Eject / Surround
	DVD	 + 	Shift + 2
	TUNER	 + 	Shift + 6
	PORT	 + 	Shift + Fav / Marker / PC
	AUX	 + 	Shift + 7
	1	 1	1
	2	 2	2
	3	 3	3
	4	 4	4
	5	 5	5
	6	 6	6
	7	 7	7
	8	 8	8
	9	 9	9
	Audio	 AUDIO	Audio / Lang I/II
	0	 0	0





 


 














 

 



 



 

**Originalfernbedienung    Ersatzfernbedienung**

	Subtitle		Subtitle / EQ
	I<<		I<< / Preset-
	Step	 + 	Shift + Pause / Step /
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	<<		<< / Tune-
	Stop		Stop / Hold
	Play		Play / Slow
	>>		>> / Tune+
	Vol+		Vol+
	Mute		Mute / Dimmer
	Tuning+ / CH+		CH+ / Page+
	Vol-		Vol-
	Remain		Yellow / YouTube / Repeat
	Tuning- / CH-		CH- / Page-
	Menu		Menu / Home
	Up		Up





Originalfernbedienung Ersatzfernbedienung

	Return		Back / Return
	Left		Left
	Enter		OK
	Right		Right
	Info		Info / Angle
	Down		Down
	Exit		Exit / Cancel / Clear
	Tuner Memory		Blue / Prime Video / Random
	Mo / St		Shift + Audio / Lang I/II
	Tuner Manual		Smart / List
	Tuner Preset		Display / Media
	SD / HD		Guide / EPG / -/--
	V-H/P / V-Sound		Setup / OPT /
	P.Bass		Red / Netflix / Search
	Sound Edit		Sound / Title
	Logo		Fav / Marker / PC
	Dimmer		Shift + Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung
































	Slow		Shift + Play /
	Repeat		Green / APP / Repeat
	Zoom		Zoom / Size
	CD Ripping		D.Menu / Top
	Cancel		Shift + Exit / Cancel / Clear
	Sleep		Sleep / Timer










 









**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-

**Originalfernbedienung Ersatzfernbedienung**

	Menu		Menu / Home
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Info		Info / Angle
	Down		Down

