
 


 

 






 

 

 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide
	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	TV / Radio		TV/R

Originalfernbedienung Ersatzfernbedienung

	Prog+		Ch +
	Prog-		Ch -
	Menu		Menu
	List		List
	Back		Back
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Red / Timer		Red
	Red / Timer		AV
	Green / FAV		Green
	Green / FAV		Pre Ch
	Yellow / Repeat		Yellow
	Blue / Goto		Blue





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Audio	Dual		
SUB	Subt		
Yellow / Repeat	+ Shift + Text		
Text	Text		
File	Media		
Play	Play		
Pause	Pause		
Stop	Stop		
Rec	Rec		
I<< PREV	I<<		
>>I NEXT	>>I		
<< REW	<<		
>> FWD	>>		

