 


 

 
 
 
 


 

 

 

 



 

 



 

 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Source		AV
	PMode		Format
	SMode		Shift + Dual
	I/II		Dual
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	-/--		Shift + Guide
	TV Menu		Menu
	DVB Menu		D. Menu
	D.Exit		Exit
	QV		Pre Ch
	Call		Back
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	V-		Vol -
	V+		Vol +
	P-		Ch -
	P+		Ch +
	Red		Red
	Green		Green





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Yellow		Yellow				
	Blue		Blue				
	Subtitle		Subt				
	Size		3D				
	Hold		Stop				
	Reveal		Smart				
	TV / Text		Text				
	Index		Shift + Info				
	Cancel		Shift + Back				
	Mix		Shift + Text				
	Subpage		Shift + Subt				
	FAV		Shift + Pre Ch				
	Info		Info				
	Language		Options				
	TV / Radio		TV/R				
	EPG		Guide				

