





 

 
 

 
 
 

 



 
 
 

 
 
 
 
 
 
 
 
 
 
 




**Originalfernbedienung Ersatzfernbedienung**

	Standby		Power
	Open / Close		Eject
	Angle		Format
	Display / Info		Info
	Q-Play / TV/Radio		TV/R
	Q-Play / TV/Radio		Shift + Play
	P/N / EPG		Guide
	Search / TTX		Text
	Search / TTX		Shift + TV/R
	PBC / List		List
	Subtitle		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

**Originalfernbedienung Ersatzfernbedienung**

	7		7
	8		8
	9		9
	0		0
	Random		Smart
	Audio		Dual
	Vol+		Vol +
	Vol-		Vol -
	Stop		Stop
	Play		Play
	Pause		Pause
	Red / Prev		Red
	Red / Prev		I<<
	Green / Next		Green
	Green / Next		>>I
	Yellow / REW		Yellow
	Yellow / REW		<<



