




**Originalfernbedienung   Ersatzfernbedienung**

	POWER ON		Power
	POWER OFF		Shift + Power
	MEMORY		Help / Info
	COLOR MODE		Auto
	MENU		Menu
	ASPECT		Eco / Aspect
	UP		Up
	LEFT		Left
	SELECT / LINE		Enter
	RIGHT		Right
	DOWN		Down
	ESC		3D / Invert
	SOURCE HDMI		Mode
	SOURCE D4 /		Shift + Mode
	SOURCE INPUT		Vol + / Page +
	SOURCE INPUT		Shift + Vol + / Page +
	SOURCE S.		Shift + Comp / Video

**Originalfernbedienung   Ersatzfernbedienung**

	SOURCE VIDEO		Comp / Video
	GAMMA		Freeze / Timer
	CONTRAST		- / Stop
	COLOR TEMP.		Source
	S. TONE		Vol - / Page -
	PATTERN		+ / Play
	BLANK		Blank / Mute



VIDEO