 



 
 
 



 


 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Eject
	DVD		Media
	Display		Info
	Disc Menu		D. Menu
	Up		Up
	Down		Down
	Left		Left
	Enter		Ok
	Right		Right
	Setup		Options
	Top Menu		Menu
	Pause / Step		Pause
	Stop		Stop
	<< / I<<		<<
	<< / I<<		I<<
	Play		Play

Originalfernbedienung Ersatzfernbedienung

	>> / >>I		>>
	>> / >>I		>>I
	Program		Sleep
	Clear		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Audio		Dual
	Subtitle		Subt
	Mark		Pre Ch





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject
	TV / VCR		TV/R
	VCR		Media
	Output Select	 + 	Shift + AV
	CLK / CNT		Options
	Up / CH+ / Track+		Up
	Down / CH- /		Down
	Left		Left
	OK		Ok
	Right		Right
	i		Info
	AV		AV
	Pause / Step		Pause
	Stop		Stop
	Rec / OTR		Rec
	<<		<<

Originalfernbedienung Ersatzfernbedienung

	Play		Play
	>>		>>
	Clear		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Audio		Dual
	Search	 + 	Shift + TV/R
	Clock		Yellow
	Repeat		Text





Originalfernbedienung **Ersatzfernbedienung**

	AD-Skip		Subt
	Showview		Smart
	Speed		Format

Originalfernbedienung **Ersatzfernbedienung**

