

 
 

 





 









 

 



 





 



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | -/-- |  | Guide |
|  | Recall |  | Back |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Nicam |  | Dual |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|----------------|
|  | Sleep |  | Sleep |
|  | Display |  | Info |
|  | CH+ |  | Ch + |
|  | CH- |  | Ch - |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Aspect |  | Format |
|  | Source |  | AV |
|  | P.Mode |  | Shift + Format |
|  | S.Mode |  | Shift + Dual |
|  | Exit |  | Exit |
|  | Menu |  | Menu |
|  | Media |  | Media |
|  | Play / Pause |  | Play |









Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|--------------|
|  | Play / Pause |  | Pause |
|  | I<< |  | I<< |
|  | >>I |  | >>I |
|  | Rec |  | Rec |
|  | Stop / Hold |  | Stop |
|  | << / Index |  | << |
|  | >> / Size |  | >> |
|  | Text |  | Text |
|  | FAV |  | Pre Ch |
|  | FAV- |  | Shift + Down |
|  | FAV+ |  | Shift + Up |
|  | Reveal |  | Smart |
|  | Cancel |  | Shift + Exit |
|  | Subpage |  | Shift + Subt |
|  | Subtitle |  | Subt |
|  | Red / TV/Radio |  | Red |
|  | Green |  | Green |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|--------|
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

