

 

 

 





 








 
 
 





 
 




**Originalfernbedienung Ersatzfernbedienung**

	Power Receiver		Power
	Display/▼		Ch -
	Menu/▲		Ch +
	Return / Repeat		Text
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Option		Options

**Originalfernbedienung Ersatzfernbedienung**

	Volume +		Vol +
	Volume -		Vol -
	Tuning +		>>
	Tuning -		<<
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Return / Repeat		Back
	Info		Info
	Phono		Shift + 1
	Tape		Shift + 2
	CD		Shift + 3
	Line 1		Shift + 4
	Line 2		Shift + 5
	Line 3		Shift + 6









 
 
 







 

 
 



 



 
 
 




**Originalfernbedienung Ersatzfernbedienung**

Power Receiver		Power
Sleep		Sleep
Info		Info
FM		Smart
AM		Media
Tuning+		Ch +
Tuning-		Ch -
Preset+		Blue
Preset-		Yellow
Vol+		Vol +
Vol-		Vol -
Option		Options
Mute		Mute
Menu/▲		Menu
Display/▼		Shift + Info
Return/Repeat		Back
Up		Up

**Originalfernbedienung Ersatzfernbedienung**

Down		Down
Right		Right
Left		Left
Enter		Ok
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
+10		Guide
Enter2		Pre Ch
Power Source		Text



