




 

 



 

 










 
 

 

 

 






Originalfernbedienung Ersatzfernbedienung



 
 


 
 

 

 

 











 
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	SUBTL		Subt
	FAV		Pre Ch
	Info		Info
	EPG		Guide
	TXT		Text

Originalfernbedienung Ersatzfernbedienung

	Audio		Dual
	IPTV		Smart
	VOL+		Vol +
	VOL-		Vol -
	CH+		Ch +
	CH-		Ch -
	Recall		Back
	Red / Zoom		Red
	Red / Zoom		Eject
	Green / SAT		Green
	Green / SAT		Media
	Yellow / Pause		Yellow
	Yellow / Pause		Shift + Pause
	Blue / TV/RD		Blue
	Blue / TV/RD		TV/R
	Up		Up
	Left		Left





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit
	<<		<<
	Play		Play
	>>		>>
	<<		<<
	>>		>>
	Pause		Pause
	Stop		Stop
	Rec		Rec

