




 






 




 

 


 
 
 
 







 

 

 

 

 



 
 

 

 
 







 
 




 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/Quick Access		0
	List		List
	Mute		Mute
	Home/Recents		Smart
	Guide		Guide
	Back/Exit		Back
	*		Menu

Originalfernbedienung Ersatzfernbedienung

	Source		AV
	Info		Info
	IVI		Media
	Text		Text
	T.Opt/Magic Link		Options
	Pause		Pause
	Play		Play
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Wheel Up		I<<





Originalfernbedienung Ersatzfernbedienung

	Wheel Down		>>
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung