 








 
 


 
 








 

 





 
 
 





 

 



 

 


 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Last		Back
	TV / R		TV/R
	Exit		Exit
	Up / CH+		Up

Originalfernbedienung Ersatzfernbedienung

	Up / CH+		Ch +
	Down / CH-		Down
	Down / CH-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -
	OK		Ok
	SUB-T		Subt
	Info		Info
	Text		Text
	Audio		Dual
	EPG		Guide
	Favor		Pre Ch
	Red / I<<		Red
	Red / I<<		I<<
	Green / <<		Green





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Green / <<	 <<		
 Yellow / >>	 Yellow		
 Yellow / >>	 >>		
 Blue / >>I	 Blue		
 Blue / >>I	 >>I		
 USB	 Media		
 Mode	 Smart		
 Stop	 Stop		
 Play / Pause	 Play		
 Play / Pause	 Pause		

