









 





 



 














 



 

 





 
 


 

 
 




 
 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	Sleep		Sleep / Timer
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-- / +10		Guide / EPG / -/--
	Recall		Back / Return
	P-Mode		Picture / Format

Originalfernbedienung Ersatzfernbedienung

	S-Mode		Sound / Title
	Nicam / Audio		Audio / Lang I/II
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Red / Program		Red / Netflix / Search
	Red / Program		TV/Radio /
	Green / Goto		Green / APP / Repeat
	Yellow / Angle		Yellow / YouTube / Repeat
	Blue / USB/Card		Blue / Prime Video / Random
	Subtitle		Subtitle / EQ
	Info		Info / Angle
	Menu / Exit		Menu / Home
	Menu / Exit		Exit / Cancel / Clear
	+ / FAV+		Vol+



