 















 









Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Standby Tv		Shift + Power
	Tv/Video		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10		Guide
	+10		Pre Ch
	Repeat		Text
	A-B RPT		Shift + Text

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep
	Dimmer		D. Menu
	Surround		Shift + Dual
	Enter		Ok
	Up/PTY Search		Up
	Down/TA/News/Inf		Down
	Right/PTY+		Right
	Left/PTY-		Left
	Top Menu/PG		Menu
	Set Up		Smart
	Setting		Options
	Menu/PL		Info
	RDS/FL		3D
	On Screen		Format
	Audio Vol+		Vol +
	Audio Vol-		Vol -
	Level+		Ch +





Originalfernbedienung Ersatzfernbedienung

	Level-		Ch -
	Tv Chanel+		Shift + Ch +
	Tv Chanel-		Shift + Ch -
	Tv Vol+		Shift + Vol +
	Tv Vol-		Shift + Vol -
	Muting		Mute
	DVD/CD Play		Play
	Stop/Memory		Stop
	Pause/FM Mode		Pause
	Recall		Back
	Return		Shift + Back
	>>I/Tuning+		>>I
	I<</Tuning-		I<<
	>>/Slow+		>>
	<</Slow-		<<
	FM/AM		Red
	Tv Sound		Green

Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subt
	Audio		Dual
	Zoom		Eject
	Title/group		List
	Play Mode		Shift + Play
	Angle		AV
	VFP/Scan Mode		Media
	SKP-Level		Yellow
	Cancel		Exit
	Bass/Treble		Blue

