



Originalfernbedienung Ersatzfernbedienung

	TV System	 + 	Shift + TV/Radio / Program
	Power		Power
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Recall	 + 	Shift + Back / Return
	A-B	 + 	Shift + 0
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Text		Text / Goto
	0		0

Originalfernbedienung Ersatzfernbedienung

	Edit		Fav / Marker / PC
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	Up / CH+	 + 	Shift + Up
	Up / CH+		Up
	Play		Play / Slow
	Left		Left
	Enter		OK
	Right		Right
	Back		Back / Return
	Down / CH-	 + 	Shift + Down
	Down / CH-		Down
	Home		Menu / Home
	Stop		Stop / Hold
	Favor/Vol + / Sel		Vol+
	Source		AV / Input / RDS
	← Skip		<< / Tune-





Originalfernbedienung Ersatzfernbedienung

	Favor/Vol - / Load		Vol-
	Time Shift		Shift + Sleep / Timer
	Skip →		>> / Tune+
	Timer Rec		Sleep / Timer
	EPG		Guide / EPG / -/--
	Dimmer		Shift + Mute / Dimmer
	DTV		Shift + 2
	Red / <<<		Shift + Red / Netflix / Search
	Red / <<<		Red / Netflix / Search
	Green / >>>		Shift + Green / APP / Repeat
	Green / >>>		Green / APP / Repeat
	Yellow / I<<<		Shift + Yellow / YouTube / Repeat
	Yellow / I<<<		Yellow / YouTube / Repeat
	Blue / >>>I		Shift + Blue / Prime Video / Random
	Blue / >>>I		Blue / Prime Video / Random
	Zoom		Zoom / Size
	Eject / Goto		Eject / Surround

Originalfernbedienung Ersatzfernbedienung

	Display		Display / Media
	TV HMR		TV/Radio /
	Mute		Mute / Dimmer
	LAN		Sound / Title
	USB		Shift + 8
	HDD		Shift + 7

