



Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|---------------|--|--------------------------------|
| | TV Direct | | TV/Radio / |
| | Power Audio | | Audio / Lang I/II |
| | Power DVR/DVD | | OK |
| | Power VCR | | Shift + Power |
| | Power STB | | Power |
| | Power TV | | Shift + OK |
| | DVR/DVD | | Fav / Marker / PC |
| | VCR | | Shift + Guide / EPG / -/- |
| | TV | | Shift + TV/Radio / Program |
| | FM/AM | | Smart / List |
| | Video | | Shift + Red / Netflix / Search |
| | Tv/Video | | Red / Netflix / Search |
| | Muting | | Mute / Dimmer |
| | Channel+ | | CH+ / Page+ |
| | Vol+ | | Vol+ |
| | Channel- | | CH- / Page- |
| | Vol- | | Vol- |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|----------------------|--|---------------------------|
| | Play VCR | | Play / Slow |
| | << VCR | | << / Tune- |
| | Stop/Memory | | Stop / Hold |
| | Pause VCR | | Pause / Step / Freeze |
| | >> VCR | | >> / Tune+ |
| | Smart Surround/Setup | | Setup / OPT / |
| | Display/On | | Display / Media |
| | 1 VCR | | Shift + 1 |
| | 1 STB | | 1 |
| | AD Input | | AV / Input / RDS |
| | 2 VCR | | Shift + 2 |
| | 2 STB | | 2 |
| | Decode | | Shift + D.Menu / Top Menu |
| | 3 VCR | | Shift + 3 |
| | 3 STB | | 3 |
| | 4 VCR | | Shift + 4 |
| | 4 STB | | 4 |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-------------|---|---------------------------|
| | Bass Boost | + | Shift + Audio / Lang I/II |
| | 5 VCR | + | Shift + 5 |
| | 5 STB | | 5 |
| | C. Tone | | Sound / Title |
| | 6 VCR | + | Shift + 6 |
| | 6 STB | | 6 |
| | Midnight | + | Shift + Smart / List |
| | 7 VCR | + | Shift + 7 |
| | 7 STB | | 7 |
| | 8 VCR | + | Shift + 8 |
| | 8 STB | | 8 |
| | A. Position | | Yellow / YouTube / Repeat |
| | 9 VCR | + | Shift + 9 |
| | 9 STB | | 9 |
| | Effect | | D.Menu / Top |
| | 0 VCR | + | Shift + 0 |
| | 0 STB | | 0 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|----------------|---|-------------------------|
| | +10 TV | | Guide / EPG / -/-- |
| | Display/Dimmer | + | Shift + Display / Media |
| | Surround | | Eject / Surround |
| | Sleep | | Sleep / Timer |
| | Rec Pause | | Rec / Rec Mode |
| | Front L+ | | Up |
| | Front R+ | + | Shift + Up |
| | Center+ | + | Shift + >> / |
| | Test Tone | | Text / Goto |
| | Front L- | | Down |
| | Front R- | + | Shift + Down |
| | Center- | + | Shift + << / |
| | D.EQ.Freq | | Picture / Format |
| | Surr L+ | + | Shift + Right |
| | Surr R+ | | Right |
| | Subwfr+ | + | Shift + CH+ / |
| | D.EQ.Level+ | + | Shift + Vol+ |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|---------------|---|----------------------------|
| | Power Audio | + | Shift + Power |
| | Power Tv | | Power |
| | FM/AM | | Eject / Surround |
| | Tv Vol+ | | Vol+ |
| | Channel+ TV | | CH+ / Page+ |
| | Tv Vol- | | Vol- |
| | Channel- TV | | CH- / Page- |
| | I<</Tuning- | | I<< / Preset- |
| | FM Mode FM/AM | + | Shift + TV/Radio / Program |
| | >>I/Tuning+ | | >>I / Preset+ |
| | Memory FM/AM | + | Shift + Smart / List |
| | TA/News/Info | | Smart / List |
| | PTY- FM/AM | | TV/Radio / |
| | PTY+ FM/AM | | Guide / EPG / -/- |
| | PTY Search | | Red / Netflix / Search |
| | Display FM/AM | | Display / Media |
| | 1 FM/AM | + | Shift + 1 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|---------|---|-----------|
| | 1 TV | | 1 |
| | 2 FM/AM | + | Shift + 2 |
| | 2 TV | | 2 |
| | 3 FM/AM | + | Shift + 3 |
| | 3 TV | | 3 |
| | 4 FM/AM | + | Shift + 4 |
| | 4 TV | | 4 |
| | 5 FM/AM | + | Shift + 5 |
| | 5 TV | | 5 |
| | 6 FM/AM | + | Shift + 6 |
| | 6 TV | | 6 |
| | 7 FM/AM | + | Shift + 7 |
| | 7 TV | | 7 |
| | 8 FM/AM | + | Shift + 8 |
| | 8 TV | | 8 |
| | 9 FM/AM | + | Shift + 9 |
| | 9 TV | | 9 |






Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-----------|--|-------------------------|
| | Power DVD | | Power |
| | I<< | | I<< / Preset- |
| | Play | | Play / Slow |
| | >>I | | >>I / Preset+ |
| | << | | << / Tune- |
| | Stop | | Stop / Hold |
| | Pause | | Pause / Step / Freeze |
| | >> | | >> / Tune+ |
| | Top Menu | | D.Menu / Top |
| | Up | | Up |
| | Menu | | Menu / Home |
| | Left | | Shift + Left |
| | Enter | | OK |
| | Right | | Right |
| | Down | | Down |
| | On Screen | | Shift + Display / Media |
| | Audio | | Audio / Lang I/II |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--------------------|--|-------------------|
| | Subtitle | | Subtitle / EQ |
| | DVD Zoom | | Zoom / Size |
| | HDD Sound Effect | | Sound / Title |
| | Set Up | | Setup / OPT / |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | ← | | Left |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | VFP Progressive | | Smart / List |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | Angle/Slide Effect | | Info / Angle |
| | 10 | | Guide / EPG / -/- |



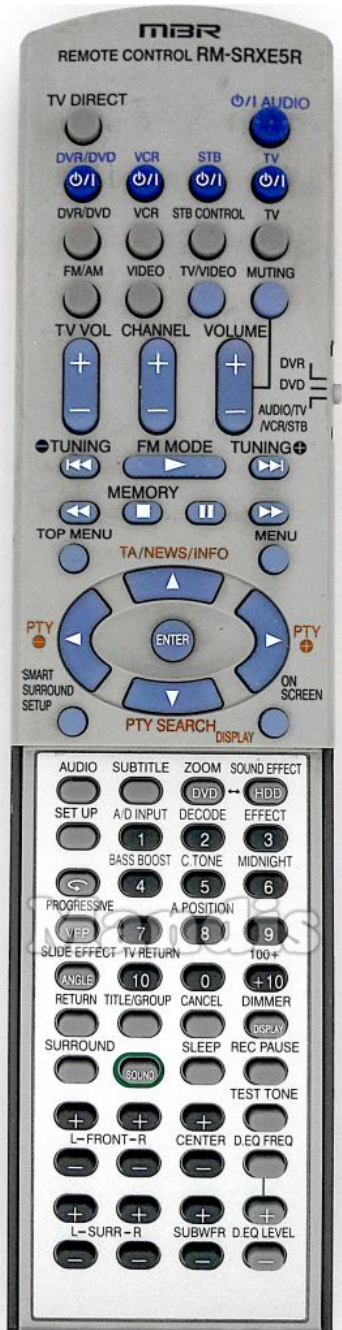

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|----------|--|-----------------------|
| | Power | | Power |
| | Channel+ | | CH+ / Page+ |
| | Channel- | | CH- / Page- |
| | I<< | | I<< / Preset- |
| | Play | | Play / Slow |
| | >>I | | >>I / Preset+ |
| | << | | << / Tune- |
| | Stop | | Stop / Hold |
| | Pause | | Pause / Step / Freeze |
| | >> | | >> / Tune+ |
| | Top Menu | | D.Menu / Top |
| | Up | | Up |
| | Menu | | Menu / Home |
| | Left | | Shift + Left |
| | Enter | | OK |
| | Right | | Right |
| | Down | | Down |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|------------------|--|-------------------------|
| | On Screen | | Shift + Display / Media |
| | Audio | | Audio / Lang I/II |
| | Subtitle | | Subtitle / EQ |
| | DVD Zoom | | Zoom / Size |
| | HDD Sound Effect | | Sound / Title |
| | Set Up | | Setup / OPT / |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | ← | | Left |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | VFP Progressive | | Smart / List |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |



