
 




 




Originalfernbedienung Ersatzfernbedienung

	AMP Power		Power
	Power		Shift + Power
	CD		Yellow
	Tuner		Green
	Network		Media
	Phono		Smart
	AUX		Red
	Recorder		Blue
	I<<<		I<<<
	>>>I		>>>I
	Stop		Stop
	Play		Play
	Pause		Pause
	Input		AV
	Info		Info
	Source Direct		3D
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	Mute		Mute
	Time/Top Menu		Menu
	Mode		Back
	Prog/Favorites		Pre Ch
	Setup		Options
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6









**Originalfernbedienung    Ersatzfernbedienung**

	AMP Power		Power
	Power		Shift + Power
	CD		Yellow
	Tuner		Green
	Network		Media
	Phono		Smart
	AUX		Red
	Recorder		Blue
	I<<		I<<
	Sound Mode		Dual
	>>I		>>I
	Stop		Stop
	Play		Play
	Pause		Pause
	Input		AV
	Info		Info
	Source Direct		3D

**Originalfernbedienung    Ersatzfernbedienung**

	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Time/Top Menu		Menu
	Mode		Back
	Prog/Favorites		Pre Ch
	Setup		Options
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	1		1
	2		2
	3		3
	4		4
	5		5



