


**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Power AMP		Shift + Power
	CD		Red
	Recorder		Green
	Network		Yellow
	Phono		Blue
	AUX		Smart
	Tuner		Media
	Internet Radio Preset 1		Shift + 1
	Internet Radio Preset 2		Shift + 2
	Internet Radio Preset 3		Shift + 3
	Play		Play
	Pause		Pause
	I<<		I<<
	>>I		>>I
	Stop		Stop
	<<		<<

**Originalfernbedienung Ersatzfernbedienung**

	>>		>>
	Preset+		Ch +
	Preset-		Ch -
	Pure Direct/Favorite		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Info		Info
	Mode		Format
	Source		AV
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	1		1







**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Power AMP	 + 	Shift + Power
	CD		Red
	Recorder		Green
	Network		Yellow
	Phono		Blue
	AUX		Smart
	Tuner		Media
	Play		Play
	Pause		Pause
	I<<		I<<
	>>I		>>I
	Stop		Stop
	<<		<<
	>>		>>
	Preset+		Ch +
	Preset-		Ch -

**Originalfernbedienung    Ersatzfernbedienung**

	Pure Direct/Favorite		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Info		Info
	Mode		Format
	Source		AV
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	1		1
	2		2
	3		3
	4		4





Originalfernbedienung    Ersatzfernbedienung

<b>5</b> JKL	5	<b>5</b>	5
<b>6</b> MNO	6	<b>6</b>	6
<b>7</b> PQRS	7	<b>7</b>	7
<b>8</b> TUV	8	<b>8</b>	8
<b>9</b> WXYZ	9	<b>9</b>	9
<b>0</b> L.	0	<b>0</b>	0
<b>+10</b>	+10	<b>GUIDE</b>	Guide
<b>CLEAR</b>	Clear	<b>EXIT</b>	Exit
<b>RANDOM</b>	Random	<b>SETTINGS</b> <b>OPT</b>	Options
<b>REPEAT</b>	Repeat	<b>REPEAT</b> <b>TEXT</b>	Text
<b>PROGRAM</b> <b>SEARCH</b>	Search/Program	<b>PROG</b> <b>SLEEP</b>	Sleep
<b>DIMMER</b>	Dimmer	<b>SOUND</b> <b>DUAL</b>	Dual

Originalfernbedienung    Ersatzfernbedienung


