


















 













 










 










 


 
 

 
 







**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Quick OSD		Media
	FL Select		Smart
	Open/Close		Eject
	Advanced		TV/R
	Picture Mode		Format
	Repeat		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

**Originalfernbedienung Ersatzfernbedienung**

	+10		Guide
	Cancel		Exit
	Play Speed		Red
	Dialogue		Green
	Manual Skip		Yellow
	Quick Replay		List
	I<< Skip		I<<
	Skip >>I		>>I
	<< Slow/Search		<<
	Slow/Search >>		>>
	Stop		Stop
	Pause		Pause
	Play		Play
	Top Menu		Shift + Menu
	Menu		Menu
	Functions		D. Menu
	Return		Back





**Originalfernbedienung Ersatzfernbedienung**

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Subtitle		Subt
	Audio		Dual
	Angle/Page		Blue
	Play Mode	+	Shift + Play
	Setup		Options
	Transfer Mode		AV
	Zoom	+	Shift + Eject
	DNR		3D

**Originalfernbedienung Ersatzfernbedienung**