 





 







 


 




 

 


 


 
 


 
 



 
 
 
 
 


 





 

 
 
 
 








 





Originalfernbedienung Ersatzfernbedienung


















 




	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	A-Z		AV
	Tv/Radio		TV/R
	Mute		Mute
	UHF		Smart
	Pause		Pause
	EPG		Guide

Originalfernbedienung Ersatzfernbedienung

	♥/FAV		Pre Ch
	Menu		Menu
	Back		Back
	EXit		Exit
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red/FTA/CAS		Red
	Green/SAT		Green
	Yellow/Tv/SAT		Yellow





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Blue/A/V	 Blue		
 ↑/+100	 >>I		
 ↓/-100	 I<<		
 +	 >>		
 -	 <<		
 F1/Zoom	 Eject		
 F2/Sleep	 Sleep		
 F3/PIP	 3D		
 F4/Recall	 Dual		
 [≡]/Text	 Text		
 [...]	 Subt		

