






 

 





 



 

 












Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|-------------------------------|
|  | Power |  | Power |
|  | Open/Close |  | Eject / Surround |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | Info |  | Info / Angle |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | Clear |  | Shift + Exit / Cancel / Clear |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Video |  | Shift + 4 |
|  | 0 |  | 0 |
|  | Menu |  | Menu / Home |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|-----------------------|
|  | Title |  | Sound / Title |
|  | Exit |  | Exit / Cancel / Clear |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | Zoom |  | Zoom / Size |
|  | Left |  | Left |
|  | Up |  | Up |
|  | Right |  | Right |
|  | >> |  | >> / Preset+ |
|  | OK |  | OK |
|  | Down |  | Down |
|  | << |  | << / Preset- |
|  | Stop |  | Stop / Hold |
|  | Play |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |
|  | ≡ |  | D.Menu / Top |

