



Originalfernbedienung Ersatzfernbedienung

| | | | |
|-------------------------------------------------------------------------------------|--------------|-------------------------------------------------------------------------------------|------------------------|
|  | Mute |  | Mute / Dimmer |
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Freeze |  | Shift + Pause / Step / |
|  | 0 |  | 0 |
|  | Aspect Ratio |  | D.Menu / Top |
|  | Guide |  | Guide / EPG / -/-- |
|  | ? |  | Shift + Info / Angle |
|  | TXT |  | Text / Goto |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---------------------------------------------------------------------------------------|-------|---------------------------------------------------------------------------------------|------------------------|
|  | OPT |  | Setup / OPT / |
|  | Back |  | Back / Return |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Menu |  | Menu / Home |
|  | Exit |  | Exit / Cancel / Clear |
|  | Info |  | Info / Angle |
|  | Vol+ |  | Vol+ |
|  | Page+ |  | Shift + Up |
|  | CH+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Page- |  | Shift + Down |
|  | CH- |  | CH- / Page- |
|  | Red |  | Red / Netflix / Search |





| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|-----------------------|---------------------|
|  | Green  Green / APP / Repeat | | |
|  | Yellow  Yellow / YouTube / Repeat | | |
|  | Blue  Blue / Prime Video / Random | | |
|  | TV/R  TV/Radio / | | |
|  | SUB  Subtitle / EQ | | |
|  | LANG  Audio / Lang I/II | | |
|  | Ⓛ  Sleep / Timer | | |
|  | Rec  Rec / Rec Mode | | |
|  | Play  Play / Slow | | |
|  | Pause  Pause / Step / Freeze | | |
|  | Stop  Stop / Hold | | |
|  | <<  << / Tune- | | |
|  | I<  I<< / Preset- | | |
|  | >I  >>I / Preset+ | | |
|  | >>  >> / Tune+ | | |
| | | | |
| | | | |

