 











**Originalfernbedienung Ersatzfernbedienung**

	Standby		Power
	DTV/VCR		AV
	Mute		Mute
	Info		Info
	Play		Play
	Pause		Pause
	Menu		Menu
	Exit		Exit
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -

**Originalfernbedienung Ersatzfernbedienung**

	Rec List		List
	Favorite		Pre Ch
	Game		Smart
	Recall		Back
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/Radio		TV/R
	Audio		Dual
	Subtitle		Subt



