


 

 
 
 
 
 
 

 

 


 
 
 

 
 
 



 







 


 






 
 


 
 


 





 












Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall/Last View		Pre Ch
	Radio/Tv		TV/R
	CH/Page+		Ch +
	CH/Page-		Ch -
	Internet		Smart
	Skype		Media

Originalfernbedienung Ersatzfernbedienung

	I<< Skip		I<<
	Skip >>I		>>I
	<< Slow/Search		<<
	Slow/Search >>		>>
	Stop		Stop
	Pause		Pause
	Play		Play
	i/Status		Info
	X/Exit		Exit
	Option		Options
	Return		Back
	Direct Navigator		List
	Guide		Guide
	Function Menu		Menu
	Up		Up
	Down		Down
	Right		Right



