
 













 

 











 

 






**Originalfernbedienung    Ersatzfernbedienung**


 

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	Recall		Back
	Menu		Menu
	EPG		Guide
	Exit		Exit

**Originalfernbedienung    Ersatzfernbedienung**

	FAV		Pre Ch
	Page+		Ch +
	Page-		Ch -
	Up/CH+		Up
	Down/CH-		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Audio		Dual
	Pause		Pause
	TTX		Text





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Subtitle		Subt				
	Tv/Radio		TV/R				

