








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	e		Vol - / Page -
	Aspect Ratio		Eco / Aspect
	Freeze		Freeze / Timer
	Hide		3D / Invert
	Zoom		+ / Play
	ReSync		Help / Info
	Source		Source
	Keystone Up		Shift + Up
	Up		Up
	Keystone Down		Shift + Down
	Down		Down
	Left		Left
	Right		Right
	Menu		Menu
	Menu		Enter
	1		Shift + Vol + / Page +

Originalfernbedienung Ersatzfernbedienung

	2		Shift + + / Play
	3		Shift + Volt / Focus
	4		Shift + Vol - / Page -
	5		Shift + - / Stop
	6		Shift + Help /
	7		Shift + Eco / Aspect
	8		Shift + 3D /
	9		Shift + Blank / Mute
	0		Shift + Freeze / Timer
	VGA		Shift + Mode
	Component		Comp / Video
	Video		Shift + Comp / Video
	S-Video		Shift + Auto
	HDMI		Mode
	Wireless		Auto
	Mute		Blank / Mute

