


 
 
 



 


 
 
 

 

 











 




 

 
 
 
 



 






 

 




 



 








**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	CD		1
	USB A		2
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	DBB		Format
	DSC		3D
	Tuner		3
	Bluetooth		4
	AUX		5
	Audio A		6
	Play/Pause CD / Tuner / Audio A		Ok
	Stop CD / Tuner / AUX / Audio A		Stop
	USB Record CD / AUX / Audio A		Rec
	USB Delete CD / AUX / Audio A		Exit
	Mode CD / AUX / Audio A		Menu

**Originalfernbedienung    Ersatzfernbedienung**

	Stop USB B CD / Tuner / AUX /		Media
	Play/Pause USB B CD / Tuner / AUX /		Play
	Auto DJ CD / AUX / Audio A		Back
	Light CD / AUX / Audio A		Info
	Alb/Presets+ CD / Tuner / AUX /		Ch +
	Alb/Presets- CD / Tuner / AUX /		Ch -
	Prog CD / AUX / Audio A		Options
	Power USB A / Bluetooth		Shift + Power
	>> CD / AUX / Audio A		Up
	<< CD / AUX / Audio A		Down
	>  CD / Tuner / AUX / Audio A		Right
	< CD / Tuner /AUX / Audio A		Left
	Prog USB A / Bluetooth		Shift + Options
	Alb/Presets+ USB A / Bluetooth		Shift + Ch +
	Alb/Presets- USB A / Bluetooth		Shift + Ch -
	Stop USB A		Shift + Stop
	Play/Pause USB B USB A / Bluetooth		Shift + Play



