

 


 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Menu		Menu
	Guide		Guide
	Input Tv		TV/R
	Input AV		AV
	i		Info
	X/Exit		Exit
	APPS		Media
	Netflix		Shift + Media
	Home		Smart
	Option		Options
	Back/Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok

Originalfernbedienung Ersatzfernbedienung

	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	STTL		Subt
	Aspect		Format
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
6 _{mno}	6	6	6
7 _{pqrs}	7	7	7
8 _{tuv}	8	8	8
9 _{wxyz}	9	9	9
0	0	0	0
? eHELP	eHelp	SOUND DUAL	Dual
LAST VIEW	Last View	FAV PRE-CH	Pre Ch
<<	<<	<<	<<
▶	Play	PLAY MODE ▶	Play
>>	>>	>>	>>
I<<	I<<	I<<	I<<
	Pause		Pause
>>I	>>I	>>I	>>I
■	Stop	■	Stop
●	Rec	REC MODE ●	Rec

