



Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Power Receiver		Power
	Dimmer		Shift + Mute / Dimmer
	Speakers A		Sound / Title
	Speakers B		Audio / Lang I/II
	COAX 1		Shift + 1
	COAX 2		Shift + 2
	OPT 1		Shift + 4
	OPT 2		Shift + 5
	LINE 1		Red / Netflix / Search
	LINE 2		Yellow / YouTube / Repeat
	LINE 3		Blue / Prime Video / Random
	PHONO		Shift + Guide / EPG / -/-
	TUNER		Shift + 6
	CD		Shift + 3
	USB		Shift + 8
	NET		Shift + Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

	FM		TV/Radio /
	AM		AV / Input / RDS
	Preset+		Shift + >>I / Preset+
	Tuning+		CH+ / Page+
	Memory		Info / Angle
	Preset-		Shift + I<< / Preset-
	Tuning-		CH- / Page-
	Shuffle		Smart / List
	Repeat		Green / APP / Repeat
	Mode		Picture / Format
	Home		Menu / Home
	Now Playing		Eject / Surround
	Setup		Setup / OPT /
	Up		Up
	Option		Shift + Setup / OPT / Tools
	Volume+		Vol+
	Left		Left





Originalfernbedienung Ersatzfernbedienung

	Enter		OK
	Right		Right
	Volume-		Vol-
	Display		Display / Media
	Down		Down
	Return		Back / Return
	Mute		Mute / Dimmer
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	1		1
	2		2
	3		3

Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide / EPG / -/-
	ENT.		Fav / Marker / PC

