



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	TV / STB	+	Shift + TV/Radio / Program
	TV / Radio		TV/Radio /
	DVR Info	+	Shift + Info / Angle
	SAT List		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Audio		Audio / Lang I/II
	0		0

Originalfernbedienung Ersatzfernbedienung

	FAV		Fav / Marker / PC
	PG+		CH+ / Page+
	PG-		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-
	M / P		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/-
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Info		Info / Angle
	V-Format		Picture / Format
	Recall		Back / Return



