



Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	i		Info / Angle
	0		0
	AV		AV / Input / RDS
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

	Blue		Blue / Prime Video / Random
	TV		TV/Radio /
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	[≡] / Text		Text / Goto
	Down		Down
	Back		Back / Return
	P+		CH+ / Page+
	Vol +		Vol+
	P-		CH- / Page-
	Vol-		Vol-
	^ / Hold		Shift + Stop /
	<< / F.T/L		<< / Tune-
	Play / [?]		Play / Slow





Originalfernbedienung Ersatzfernbedienung

	Play / [?]	SHIFT + SLOW	Shift + Play /
	>> / Size	TUNE+	>> / Tune+
	>> / Size	SHIFT + TUNE+	Shift + >> /
	v / Timer / Book	SHIFT + TIMER SLEEP	Shift + Sleep / Timer
	Rec / Top Menu	SHIFT + REC MODE	Shift + Rec / Rec Mode
	Rec / Top Menu	REC MODE	Rec / Rec Mode
	Stop / [X]	HOLD	Stop / Hold
	Pause / [≡i]	SHIFT + STEP-FREEZE	Shift + Pause / Step /
	Pause / [≡i]	STEP-FREEZE	Pause / Step / Freeze
	Zoom	SIZE ZOOM	Zoom / Size
	♪	TITLE SOUND	Sound / Title
	O)/I/II	LANG I/II AUDIO	Audio / Lang I/II
	⊙ Sleep	TIMER SLEEP	Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

