

 

 

 
 
 

 
 


 

 
 
 
 
 


 





 
 


 




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Open / Close		Eject
	PP		Back
	Sleep		Sleep
	Mute		Mute
	Recall		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide

Originalfernbedienung Ersatzfernbedienung

	TV / AV		AV
	Audio ST/D/I/II		Dual
	TV / DVD		Smart
	Menu		Menu
	Menu		Ok
	Up / P+		Up
	Up / P+		Ch +
	Down / P-		Down
	Down / P-		Ch -
	Right / V+		Right
	Right / V+		Vol +
	Left / V-		Left
	Left / V-		Vol -
	Display		Info
	Clear		Exit
	Prog		Shift + Sleep
	Stop		Stop



 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	Enter / Play		Play
	Pause / Step		Pause
	F.Rev		<<
	F.Fwd		>>
	Prev		I<<
	Next		>>I
	DVD Menu		D. Menu
	DVD Up		Shift + Up
	DVD Down		Shift + Down
	DVD Left		Shift + Left
	DVD Right		Shift + Right
	Repeat		Text
	Repeat A-B		Shift + Text
	Slow Play		Shift + Play
	Angle		Format
	Search		TV/R
	Swap		Shift + Back

Originalfernbedienung Ersatzfernbedienung

	Zoom		Shift + Eject
	Subtitle		Subt
	Title PBC		Media

