
 
 
 

 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Exit
	Language		Dual
	Angle		Format
	Subtitle		Subt
	Return		Back
	Goto		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	10+		Guide
	Setup		Options
	Title		Info
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Zoom		Eject
	Prog		Sleep
	PBC		Smart
	RAN		Media
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Audio		Shift + Dual





Originalfernbedienung Ersatzfernbedienung

	Repeat		Text
	A-B	+	Shift + Text
	Slow	+	Shift + Power
	OSD	+	Shift + Info
	REV		<<
	FWD		>>
	Prev		I<<
	Next		>>I
	Stop		Stop
	Pause		Pause
	Play		Play

Originalfernbedienung Ersatzfernbedienung

