

 

 







 






 





 


 



 


 














 


 





Originalfernbedienung Ersatzfernbedienung

	RCVR On		Power
	RCVR Standby		Shift + Power
	RCVR Return		Back
	RCVR Setup		Options
	RCVR		Ch +
	RCVR CH-/Disc-		Ch -
	RCVR Vol+		Vol +
	RCVR Vol-		Vol -
	RCVR CH Sel / Top Menu		Shift + Menu
	RCVR CH Sel / Top Menu		D. Menu
	RCVR Test / Menu		Menu
	RCVR Audio Sel / TV/VCR		TV/R
	RCVR Muting		Mute
	RCVR Up		Up
	RCVR Left		Left
	RCVR Enter		Ok
	RCVR Right		Right

Originalfernbedienung Ersatzfernbedienung

	RCVR Down		Down
	RCVR Angle / Level Down		Format
	RCVR Subtitle / Level Up		Subt
	RCVR I<<		I<<
	RCVR Play		Play
	RCVR >>I		>>I
	RCVR <<		<<
	RCVR Stop		Stop
	RCVR >>		>>
	RCVR Rec /		Rec
	RCVR Pause / Play Rev.		Pause
	RCVR Input Sel.		1
	RCVR Input Sel.		2
	RCVR Input Sel.		3
	RCVR Input Sel.		4
	RCVR Input Sel.		5
	RCVR Input Sel.		6





Originalfernbedienung Ersatzfernbedienung





 
V3	RCVR Input Sel.	7	7
V4	RCVR Input Sel.	8	8
V5	RCVR Input Sel.	9	9
PH	RCVR Input Sel.	0	0
1 PURE A	RCVR Pure A	SHIFT + 1	Shift + 1
2 DIRECT	RCVR Direct	SHIFT + 2	Shift + 2
3 STEREO	RCVR Stereo	SHIFT + 3	Shift + 3
4 SURR	RCVR Surr.	SHIFT + 4	Shift + 4
5 ALL ST	RCVR All St.	SHIFT + 5	Shift + 5
6 DSP	RCVR DSP	SHIFT + 6	Shift + 6
7 SPA	RCVR SP A	SHIFT + 7	Shift + 7
8 SP B	RCVR SP B	SHIFT + 8	Shift + 8
9 CINE FLTR	RCVR CINE	SHIFT + 9	Shift + 9
0 DIMMER	RCVR Dimmer	SHIFT + 0	Shift + 0
+10 D/SP/AY	RCVR Display	DISPLAY INFO	Info
+10 D/SP/AY	RCVR Display	-/-- GUIDE	Guide
SEARCH ZONE 2 ENTER	RCVR Zone 2	FAV PRE-CH	Pre Ch

Originalfernbedienung Ersatzfernbedienung








Originalfernbedienung Ersatzfernbedienung

	DVD On		Power
	DVD Standby	 + 	Shift + Power
	DVD Sleep		Sleep
	DVD Return		Back
	DVD Setup		Options
	DVD Disc+		Ch +
	DVD Disc-		Ch -
	DVD Vol+		Vol +
	DVD Vol-		Vol -
	DVD CH Sel / Top Menu	 + 	Shift + Menu
	DVD CH Sel / Top Menu		D. Menu
	DVD Test /		Menu
	DVD Audio Sel / TV/VCR		TV/R
	Muting		Mute
	DVD Angle /		Format
	DVD Subtitle / Level+		Subt
	DVD I<<<		I<<<



 


 
 

 


 
 
 

 

 

 

 
 

 
 
 
 
 
Originalfernbedienung Ersatzfernbedienung

	DVD Play		Play
	DVD >>I		>>I
	DVD <<		<<
	DVD Stop		Stop
	DVD >>		>>
	DVD Random		Rec
	DVD Pause		Pause
	DVD Eject		Exit
	DVD Input Sel.		1
	DVD Input Sel. CD		2
	DVD Input Sel. V1		3
	DVD Input Sel. V2		4
	DVD Input Sel.		5
	DVD Input Sel.		6
	DVD Input Sel. V3		7
	DVD Input Sel. V4		8
	DVD Input Sel. V5		9





Originalfernbedienung Ersatzfernbedienung


	DVD Input Sel. PH		0
	DVD 1		+  Shift + 1
	DVD 2		+  Shift + 2
	DVD 3		+  Shift + 3
	DVD 4		+  Shift + 4
	DVD 5		+  Shift + 5
	DVD 6		+  Shift + 6
	DVD 7		+  Shift + 7
	DVD 8		+  Shift + 8
	DVD 9		+  Shift + 9
	DVD 0		+  Shift + 0
	DVD +10 / --/--		Guide
	DVD Search/Enter		Pre Ch

Originalfernbedienung Ersatzfernbedienung

 
 
 


 
 
 









 

 




Originalfernbedienung Ersatzfernbedienung

	On		Power
	Standby		Shift + Power
	Disc+		Ch +
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Subtitle		Subt
	I<<<		I<<<
	Play		Play
	>>>I		>>>I
	<<<		<<<
	Stop		Stop
	>>>		>>>
	Pause		Pause
	Random		Rec
	Eject		Eject
	1		1

Originalfernbedienung Ersatzfernbedienung

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide

