








 

 

 

 



 

 

 

 

 









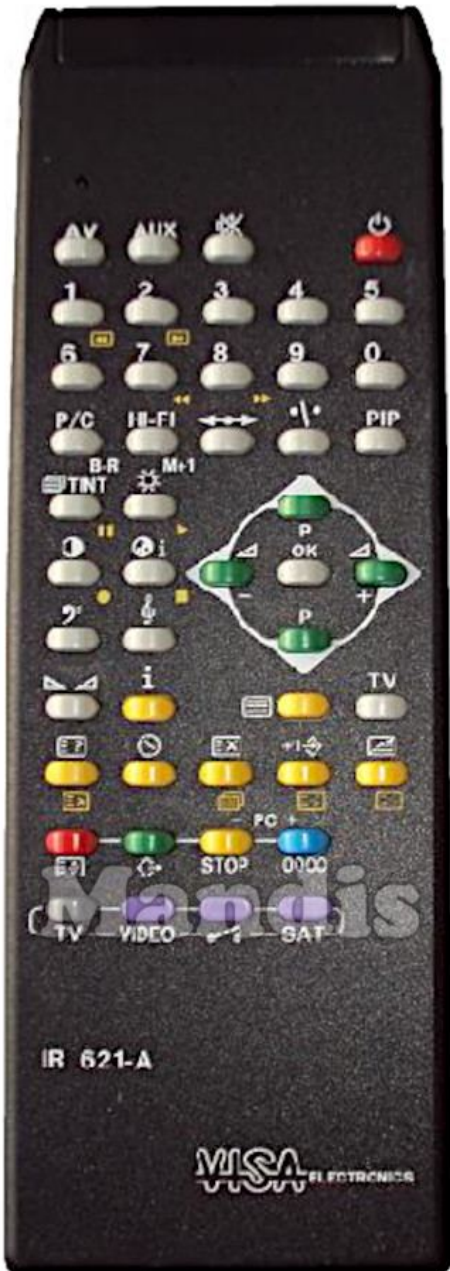
Originalfernbedienung Ersatzfernbedienung

	Power		Power
	AV		AV
	Aux	 + 	Shift + AV
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P/C / B-R		Pre Ch
	HIFI M+1		Smart
	·\·		Media

Originalfernbedienung Ersatzfernbedienung

	PIP		Guide
	TINT		3D
	*		Options
	○	 + 	Shift + Options
	○i		Subt
	Fa		Dual
	Sol	 + 	Shift + Dual
	←•→	 + 	Shift + Smart
	i		Info
	Text		Text
	TV		TV/R
	Up / P+		Up
	Up / P+		Ch +
	Down / P-		Down
	Down / P-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +





Originalfernbedienung Ersatzfernbedienung

	Left / Vol-		Left
	Left / Vol-		Vol -
	OK		Ok
	Reveal		Menu
	Sleep		Sleep
	Text Cancel		Exit
	+1 Input		Shift + Media
	Mix		Shift + Text
	Red / Text Size		Red
	Green / Exit		Green
	Yellow / Stop / PC-		Yellow
	Blue / 0100 / PC+		Blue

Originalfernbedienung Ersatzfernbedienung

