





 

 



 

 















 


 




 






 



 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject / Surround
	Mute		Mute / Dimmer
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Nicam		Audio / Lang I/II
	Aspect		Shift + Picture / Format
	1		1
	2		2
	3		3
	Red		Red / Netflix / Search
	4		4
	5		5
	6		6
	Green / Goto		Shift + Text /
	Green / Goto		Green / APP / Repeat
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	Yellow / Angle		Shift + Info / Angle
	Yellow / Angle		Yellow / YouTube / Repeat
	-/--		Shift + Guide / EPG / -/--
	0		0
	Recall		Back / Return
	Blue / D.Dis		Blue / Prime Video / Random
	Blue / D.Dis		Shift + Display / Media
	Up / PR+		CH+ / Page+
	Up / PR+		Up
	Left / Vol-		Left
	Left / Vol-		Vol-
	OK		OK
	Right / Vol+		Right
	Right / Vol+		Vol+
	Down / PR-		CH- / Page-





Originalfernbedienung Ersatzfernbedienung

	Down / PR-		Down
	Source		AV / Input / RDS
	Sleep		Sleep / Timer
	Info		Info / Angle
	Menu		Menu / Home
	Repeat / TXT		Text / Goto
	Repeat / TXT		Shift + Green / APP / REPEAT
	A-B / Hold		Shift + Stop /
	A-B / Hold		Shift + Yellow / YouTube / REPEAT A-B
	Language / Mix		Shift + Audio / Lang I/II
	Subtitle /		Subtitle / EQ
	Setup / Index		Setup / OPT /
	DVD Menu /		D.Menu / Top
	DVD Menu /		Shift + Zoom /
	Title / Reveal		Shift + Sound / Title
	Zoom / Cancel		Zoom / Size
	Zoom / Cancel		Shift + Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	Play/Pause / EPG		Play / Slow
	Play/Pause / EPG		Guide / EPG / -/-
	Play/Pause / EPG		Pause / Step / Freeze
	Stop / List		Stop / Hold
	Stop / List		Smart / List
	<< / DTV/Radio		<< / Tune-
	<< / DTV/Radio		TV/Radio /
	>> / FAV		>> / Tune+
	>> / FAV		Fav / Marker / PC
	I<< / Page		I<< / Preset-
	>>I / Page Up		>>I / Preset+
	Exit		Exit / Cancel / Clear
	D.Vol+ / FAV+		Shift + Vol+
	Rec		Rec / Rec Mode
	Media		Display / Media
	Still		Shift + Pause / Step /
	D.Vol- / FAV-		Shift + Vol-

