










 


 
 
 
 

 



 

 
 


 





 
 

Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Mute		Mute
Update	 + 	Shift + Options
Subt.List		Subt
Reveal		Options
Menu Up		Up
Txt Stop		Stop
Menu Left		Left
Info		Info
OK Enter		Ok
Sleep Timer		Sleep
Return TV		TV/R
Menu video		Format
Txt Expand		Eject
TV/AV		AV
Menu Right		Right
Menu Off		Exit

Originalfernbedienung Ersatzfernbedienung

Text		Text
Menu Down		Down
Back		Back
Menu		Menu
Volume+		Vol +
Display	 + 	Shift + Info
Chan.Up		Ch +
Volume-		Vol -
Chan.Down		Ch -
1		1
2		2
3		3
4		4
5		5
6		6
7		7
Menu audio		Dual



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8	 8		
9	 9		
Guide -/-- 1.	 GUIDE		
0/10	 0		
2.Fav P/C 2.	 PRE-CH		
Red	 A		
Green	 B		
Yellow	 C		
Blue	 D		
Disp	 SMART		
Color- S.Std	 MEDIA		
Audio+	 D.MENU		
Color+ P.Std	 3D		
Bright+ Mode	 SHIFT +  ECO 3D Shift + 3D		
Off/Tim	 LIST		

