
 

 



 
 

 

 





**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Eject / Open/Close		Eject
	DVD		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Program		Sleep
	Audio		Dual
	Zoom		Shift + Eject

**Originalfernbedienung Ersatzfernbedienung**

	Angle		Format
	Subtitle		Subt
	Title		Media
	Marker		Pre Ch
	Search		TV/R
	Display / CLK/CNT		Info
	i / Setup		Options
	Up		Up
	Left		Left
	OK / Select / Enter		Ok
	Right		Right
	Down		Down
	Disc Menu		D. Menu
	Disc Menu		Menu
	Return		Back
	Stop		Stop
	Pause / Step		Pause



