

 




 









 




 





 








 





 
 












 

 

 

 

 






Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Open/Close		Eject
	Function		AV
	Subtitle		Subt
	Home		Smart
	Sleep		Sleep
	Disc Menu		D. Menu
	Info Menu		Info
	Info Menu		Menu
	Enter		Ok
	Up		Up
	Preset+		Ch +
	Down		Down
	Preset-		Ch -
	Right/Tuning+		Right
	Left/Tuning-		Left
	Back		Back
	Title/PopUp		Media
	Play		Play
	Pause/Step		Pause
	Stop		Stop
	Scan >>		>>
	<< Scan		<<
	Skip >>		>>
	<< Skip		<<
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Sound Effect		Dual
	Optical Tv Sound		TV/R
	Speaker Level		Options
	Red/RDS		Red
	Green/PTY		Green
	Yellow/PTY Search		Yellow





**Originalfernbedienung**

**Ersatzfernbedienung**

	Blue/Mono/Stereo		Blue
	Clear		Exit
	Repeat		Text
	*		Shift + 3
	Audio		Shift + Dual
	*		Shift + 6
	*		Shift + 9
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

**Originalfernbedienung**

**Ersatzfernbedienung**

	Tv Power		Shift + Power
	AV Input Tv		Shift + AV
	CH+ Tv		Shift + Ch +
	CH- Tv		Shift + Ch -
	Vol+ Tv		Shift + Up
	Vol- Tv		Shift + Down
	Mute Tv		Shift + Mute

