


 

 

 













 


 

 




 






 


 

 
 
 
 

 

 

 



 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|-------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Source/[≡] |  | AV |
|  | Normal/OK/[≡i] |  | Ok |
|  | PR+ |  | Ch + |
|  | Up |  | Up |
|  | Down |  | Down |
|  | PR- |  | Ch - |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|--------|
|  | Right/[≡o] |  | Right |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Left/[≡+] |  | Left |
|  | Menu |  | Menu |
|  | Mute |  | Mute |
|  | Recall/[≡?] |  | Pre Ch |
|  | Sleep/[≡◇] |  | Sleep |
|  | Red/Skip |  | Red |
|  | Green/Movie |  | Green |
|  | Yellow/Delete |  | Yellow |
|  | Blue/Mode |  | Blue |
|  | [≡] |  | Text |
|  | [≡x] |  | TV/R |

