






















 














**Originalfernbedienung Ersatzfernbedienung**

|   |        |   |                            |
|---|--------|---|----------------------------|
|    | Power  |    | Power                      |
|    | Mute   |    | Mute / Dimmer              |
|    | 1      |    | 1                          |
|    | 2      |    | 2                          |
|    | 3      |    | 3                          |
|    | 4      |    | 4                          |
|    | 5      |    | 5                          |
|    | 6      |    | 6                          |
|    | 7      |    | 7                          |
|    | 8      |    | 8                          |
|   | 9      |   | 9                          |
|  | 0      |  | 0                          |
|  | -/--   |  | Shift + Guide / EPG / -/-- |
|  | Recall |  | Back / Return              |
|  | Red    |  | Red / Netflix / Search     |
|  | Green  |  | Green / APP / Repeat       |
|  | Yellow |  | Yellow / YouTube / Repeat  |

**Originalfernbedienung Ersatzfernbedienung**

|   |            |   |                             |
|---|------------|---|-----------------------------|
|    | Blue       |    | Blue / Prime Video / Random |
|    | Source     |    | AV / Input / RDS            |
|    | Vol+       |    | Vol+                        |
|    | Vol-       |    | Vol-                        |
|    | CH+        |    | CH+ / Page+                 |
|    | CH-        |    | CH- / Page-                 |
|    | Audio      |    | Audio / Lang I/II           |
|    | Aspect     |    | Eject / Surround            |
|    | Display    |    | Display / Media             |
|    | Tv/Radio   |    | TV/Radio /                  |
|   | Rec        |   | Rec / Rec Mode              |
|  | Up         |  | Up                          |
|  | Left       |  | Left                        |
|  | OK/CH List |  | OK                          |
|  | Right      |  | Right                       |
|  | Down       |  | Down                        |
|  | Menu       |  | Menu / Home                 |



