



Originalfernbedienung Ersatzfernbedienung

	Power Receiver		Power
	DVD		Shift + 2
	TV		Shift + 1
	Tuner / Band		Shift + 6
	CD		Shift + 3
	DVD Recorder		Shift + 5
	VCR		Shift + 4
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Volume+		Vol+

Originalfernbedienung Ersatzfernbedienung

	Disc / Direct Tuning		Display / Media
	0		0
	≥10 / -/--		Guide / EPG / -/--
	Volume-		Vol-
	I<< / <<		I<< / Preset-
	>> / >>I		>>I / Preset+
	Up		Up
	Menu / Play List		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Subwoofer		Eject / Surround
	Test		Text / Goto
	< / -/L		CH- / Page-
	> / +/R		CH+ / Page+
	Level		Smart / List





Originalfernbedienung **Ersatzfernbedienung**

	Effect		Info / Angle
	Stereo / 2CH Mix / OFF		Audio / Lang I/II
	Dolby PL II		Sound / Title
	SFC		Subtitle / EQ
	Muting		Mute / Dimmer

Originalfernbedienung **Ersatzfernbedienung**

