


 






Originalfernbedienung Ersatzfernbedienung


















	Power		Power
	Open / Close		Eject / Surround
	OSD		Display / Media
	1		1
	2		2
	3		3
	Subtitle		Subtitle / EQ
	4		4
	5		5
	6		6
	Angle		Info / Angle
	7		7
	8		8
	9		9
	Language		Audio / Lang I/II
	R/L		Blue / Prime Video / Random
	0		0

Originalfernbedienung Ersatzfernbedienung

















	10+		Guide / EPG / -/--
	Setup		Setup / OPT /
	Mute		Mute / Dimmer
	Clear		Exit / Cancel / Clear
	Prog		TV/Radio /
	Time		Sleep / Timer
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Title		Sound / Title
	Menu		Menu / Home
	Default		AV / Input / RDS
	<<		<< / Tune-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze




Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Audio Off		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Record		Rec / Rec Mode
Rewind		<< / Tune-
F.Forward		>> / Tune+
Prev.		I<< / Preset-
Next		>>I / Preset+
Title		Sound / Title
Audio		Audio / Lang I/II
Subt.		Subtitle / EQ
Open/Close		Eject / Surround
Auto/Track		Picture / Format
Zoom		Zoom / Size
Np		Sleep / Timer


















Originalfernbedienung Ersatzfernbedienung

Progr.		TV/Radio /
Top Menu		D.Menu / Top
Setup		Setup / OPT /
C/CH		Text / Goto
DVD/TV		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Angle		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Pbc		Exit / Cancel / Clear
Menu Down		Down
Return		Back / Return
Volume+		Vol+
Resume		Smart / List
Slow Up		CH+ / Page+




















Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Audio Off		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Record		Rec / Rec Mode
Rewind		<< / Tune-
F.Forward		>> / Tune+
Prev.		I<< / Preset-
Next		>>I / Preset+
Title		Sound / Title
Lang		Audio / Lang I/II
Subt.		Subtitle / EQ
Open/Close		Eject / Surround
Auto/Track		Picture / Format
Zoom		Zoom / Size
Pbc		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

Progr.		TV/Radio /
Top Menu		D.Menu / Top
Setup		Setup / OPT /
Resume		Text / Goto
DVD/TV		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Angle		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Clear/00:00		Exit / Cancel / Clear
Menu Down		Down
Return		Back / Return
Volume+		Vol+
Mode		Smart / List
Slow Up		CH+ / Page+





Originalfernbedienung Ersatzfernbedienung

Volume-		Vol-
Display		Display / Media
Slow Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
+10		Guide / EPG / -/--
0		0
C/CH		Fav / Marker / PC
Np		Red / Netflix / Search
Repeat/1/All		Green / APP / Repeat

Originalfernbedienung Ersatzfernbedienung

Rep/A-B		Yellow / YouTube / Repeat
R/L		Blue / Prime Video / Random

